
High Pressure Cleaner Cold Water

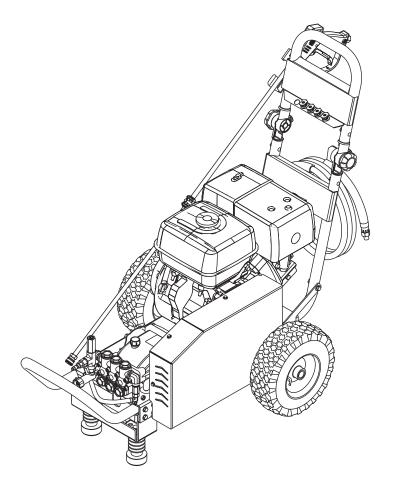

# **OPERATOR'S MANUAL**



MODEL #

ORDER #

BGA-252737 BGA-373537 BGA-373537 1.106-057.0 1.106-058.0 1.107-251.0



8.919-400.0

# CONTENTS

| Important Safety Information               | 4-6   |
|--------------------------------------------|-------|
| Component Identification                   | 7     |
| Assembly Instructions                      | 8     |
| Operating Instructions                     | 9-10  |
| Detergent and General Operating Techniques | 11    |
| Shut Down and Clean-Up                     | 12    |
| Storage                                    | 13    |
| Troubleshooting                            | 14-15 |
| Preventive Maintenance                     | 16    |
| Hose and Spray Gun Assembly and Parts list | 17    |
| Oil Change Record                          | 18    |

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

Date of Purchase \_\_\_\_\_

The model and serial numbers will be found on a decal attached to the pressure washer. You should record both serial number and date of purchase and keep in a safe place for future reference.

# ER Š OPERATO

# **INTRODUCTION & IMPORTANT SAFETY INFORMATION**

Thank you for purchasing this Pressure Washer.

We reserve the right to make changes at any time without incurring any obligation.

#### Owner/User Responsibility:

The owner and/or user must have an understanding of the manufacturer's operating instructions and warnings before using this pressure washer. Warning information should be emphasized and understood. If the operator is not fluent in English, the manufacturer's instructions and warnings shall be read to and discussed with the operator in the operator's native language by the purchaser/owner, making sure that the operator comprehends its contents.

Owner and/or user must study and maintain for future reference the manufacturers' instructions.

The operator must know how to stop the machine quickly and understand the operation of all controls. Never permit anyone to operate the engine without proper instructions.

#### SAVE THESE INSTRUCTIONS

This manual should be considered a permanent part of the machine and should remain with it if machine is resold.

When ordering parts, please specify model and serial number. Use only identical replacement parts. This machine is to be used only by trained operators.

#### **IMPORTANT SAFETY** INFORMATION

#### 



**READ OPERATOR'S** 

MANUAL THOROUGHLY

PRIOR TO USE.

WARNING: To reduce the risk of injury, read operating instructions carefully before using.

1. Read the owner's manual thoroughly. Failure to follow instructions could cause malfunction of the machine and result in death, serious bodily injury and/or property damage. 2. Know how to stop the

machine and bleed pressure quickly. Be thoroughly familiar with the controls.

- 3. Stay alert watch what you are doing.
- 4. All installations must comply with local codes. Contact your electrician, plumber, utility company or the selling distributor for specific details.

#### 



IN A WELL

VENTILATED AREA

#### WARNING: Risk of asphyxiation. Use this product only in a well ventilated area.

5. Avoid installing machines in small areas or near exhaust fans. Exhaust contains poisonous carbon monoxide gas; exposure may cause loss of consciousness and may lead to death. It also contains

chemicals known, in certain quantities, to cause cancer, birth defects or other reproductive harm.



WARNING: Risk of fire. Do not add fuel when the product is operating.

WARNING: Risk of explosion do not spray flammable liquids.

MACHINE.

6. Do not place machine near flammable objects as the engine is hot.

WARNING: This product contains chemicals known to the state of California to cause cancer and birth defects or other reproductive harm. Operation of this equipment may create sparks that can start fires around dry vegetation. A spark arrestor may be required. The operator should contact: Local fire agencies for laws or regulations relating to fire prevention requirements.

7.Allow engine to cool for 1-2 minutes before refueling. If any fuel is spilled, make sure the area is dry before testing the spark plug or starting the engine. (Fire and/or explosion may occur if this is not done.)

Gasoline engines on mobile or portable equipment shall be refueled:

- a. outdoors:
- b. with the engine on the equipment stopped;
- with no source of ignition within 10 feet of c. the dispensing point; and
- d. with an allowance made for expansion of the fuel should the equipment be exposed to a higher ambient temperature.

In an overfilling situation, additional precautions are necessary to ensure that the situation is handled in a safe manner.

#### WARNING: Risk of injury. Disconnect battery ground terminal before servicing.

8. Transport/repair with fuel tank EMPTY or with fuel shut-off valve OFF.

# **IMPORTANT SAFETY INFORMATION**



KEEP WATER

SPRAY AWAY FROM ELECTRICAL WIRING.

WARNING: Keep wand, hose, and water spray away from electric wiring or fatal electric shock may result.

9. Do not sprav water on or near electrical components.



WARNING: Flammable liquids can create fumes which can ignite, causing property damage or severe injury.

WARNING: Risk of explosion -Do not spray flammable liquids.

10. Keep operating area clear of all persons.

WARNING: This machine exceeds 85 db appropriate ear protection must be worn.

12.To reduce the risk of injury, close supervision is necessary when a machine is used near children. Do not allow children to operate the pressure washer. This machine must be attended during operation.



WARNING: High pressure developed by these machines will cause personal injury or equipment damage. Keep clear of nozzle. Use caution when operating. Do not direct discharge stream at people, or severe injury or death will result.

- 13. Never make adjustments on machine while in operation.
- 14. Be certain all quick coupler fittings are secured before using pressure washer.

#### WARNING



#### WARNING: Protect machine from freezing.

15. To keep machine in best operating conditions, it is important you protect machine from freezing. Failure to protect machine from freezing could cause malfunction of the machine and result in death,

serious bodily injury, and/or property damage. Follow storage instructions specified in this manual.

16. The best insurance against an accident is precaution and knowledge of the machine.



WARNING: Be extremely careful when using a ladder, scaffolding or any other relatively unstable location. The cleaning area should have adequate slopes and drainage to reduce the possibility of a fall due to slippery surfaces.

17. Do not overreach or stand on unstable support. Keep good footing and balance at all times.

WARNING

EAR PROTECTION

MUST BE WORN



USE PROTECTIVE EYE WEAR AND CLOTHING WHEN OPERATING THIS EQUIPMENT.

WARNING: High pressure spray can cause paint chips or other particles to become airborne and fly at high speeds. To avoid personal injury, eye, hand and foot safety devices must be worn.

11. Eye, hand, and foot protection must be worn when using this equipment.

WARNING: Grip cleaning wand WARNING securely with both hands before starting. Failure to do this could result in injury from a whipping wand.

TRIGGER GUN KICKS **BACK - HOLD WITH** BOTH HANDS


**RISK OF INJURY** FROM FALLS WHEN USING LADDER.

#### **IMPORTANT SAFETY INFORMATION**

- Do not operate this machine when fatigued or under the influence of alcohol, prescription medications, or drugs.
- 19.Inlet water must be clean fresh water and no hotter then 90°F.
- 20. Manufacturer will not be liable for any changes made to our standard machines or any components not purchased from us.
- 21. Do not allow acids, caustic or abrasive fluids to pass through the pump.
- 22. Never run pump dry or leave spray gun closed longer than 1-2 minutes.
- 26.When servicing belts, don't exceed 14 lb-ft on pump mounting screws.Failure to do so will cause pump thread damage.



Follow the maintenance instructions specified in the manual.

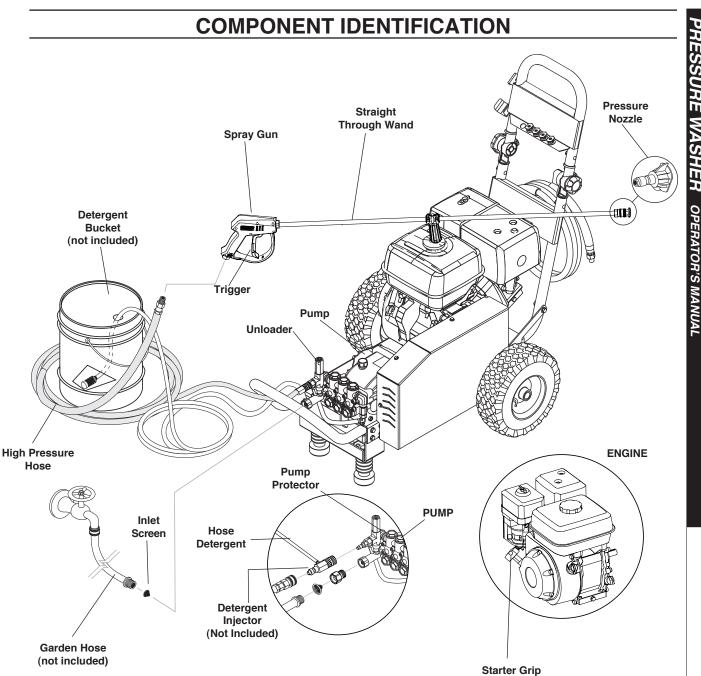

1 **OPERATOR'S MANUAL** 

7

Pump — Develops high pressure.

Starter Grip — Used for starting the engine manually.

Spray Gun — Controls the application of water and detergent onto cleaning surface with trigger device. Includes safety latch.

Unloader valve — Safety device which allows pressure tu be released when spray gun is closed


Detergent Injector — Allows you to siphon and mix detergents. (Not included with machine)

Wand — Must be connected to the spray gun.

High Pressure Hose — Connect one end to water pump discharge nipple and the other end to spray gun.

**Pump Protector** — Cycles fresh cool water through pump when recirculating water reaches 140°F/60°C.

Note: If trigger on spray gun is released for more than 1-2 minutes, water will leak from valve. Warm water will discharge from pump protector onto floor. This system prevents internal pump damage.

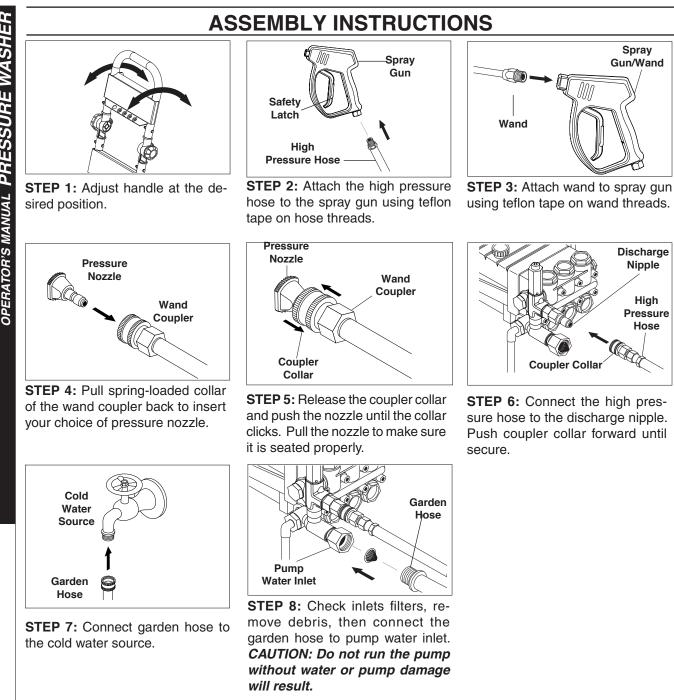


Nipple


High

Hose


#### **OPERATING INSTRUCTIONS**

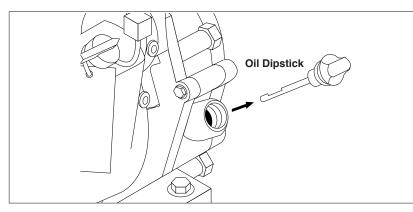


**STEP 1:** Check engine oil level. Oil level should be level with the bottom of the oil filler neck. Be sure the machine is level when checking the oil level. (Refer to the engine's operating manual included with machine.) We recommend that the oil be changed after the first 5 hours of use, then once every 50 hours. **Note:** Improper oil levels will cause low oil sensor to shut off engine. **IMPORTANT! Do not run engine with high or low oil levels as this will cause engine damage.** 

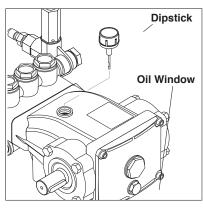

**STEP 2:** Remove shipping cap and install oil dipstick. Check pump oil level by using dipstick or observe oil level in oil window (if equipped). **Use 40 wt. non detergent oil.** 

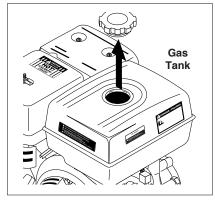

**STEP 3:** Fill gas tank with unleaded gasoline. Do not use leaded gasoline.

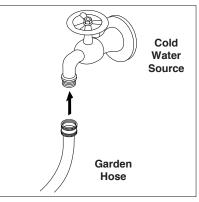

**STEP 4:** Connect garden hose to the cold water source and turn water on completely. Never use hot water.


Choke

Choke

Lever


Fuel

Valve

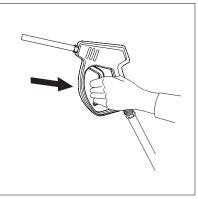

**STEP 5:** Trigger the spray gun to eliminate trapped air then wait for a steady flow of water to emerge from the spray nozzle.


Run

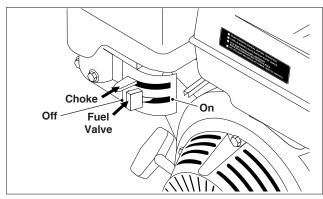


**STEP 6:** Slide the fuel valve lever to the "ON" position. When the engine is not in use, leave the fuel valve in the "OFF" position.

**STEP 7:** Move the choke lever to the "Choke" position (on a warm engine, leave the choke lever in the run position).

#### **OPERATING INSTRUCTIONS**

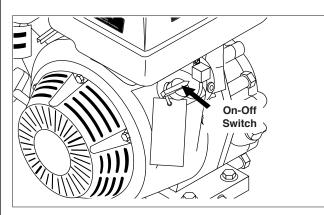


**STEP 8:** Turn the engine switch to "On" position. On Vanguard engines, move the throttle lever to "Fast" position, shown on the engine as a rabbit.

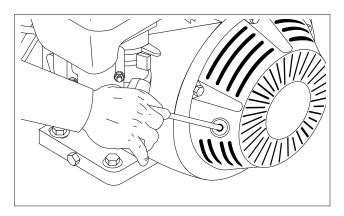


**STEP 9:** Pull the starter grip. If the engine fails to start after 2 pulls, squeeze the trigger gun to release pressure and repeat step. Return starter gently. After the engine warms up enough to run smoothly, move choke to run position and throttle to fast position.

CAUTION: Small engines may kick back. Do not hold pull starter grip tightly in hand.

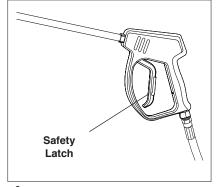

WARNING! Never replace nozzles without engaging the safety latch on the spray gun trigger.

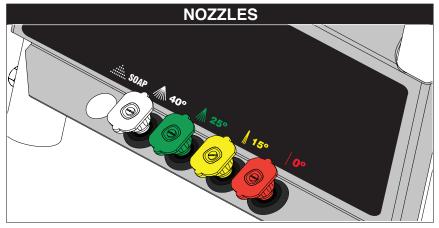

The four color-coded quick connect nozzles provide a wide array of spray widths from  $0^{\circ}$  to  $40^{\circ}$  and are easily accessible when placed in the convenient rubber nozzle holder, which is provided on the front of the machine.

**NOTE:** For a more gentle rinse, select the white 40° or green 25° nozzle. To scour the surface, select the yellow 15° or red 0° nozzle. To apply detergent select the black nozzle. (Detergent injector and black nozzle not included)


## DETERGENT AND GENERAL CLEANING TECHNIQUES



WARNING: Some detergents may be harmful if inhaled or ingested, causing severe nausea, fainting or poisoning. The harmful elements may cause property damage or severe injury.

STEP 1: Connect the optional

detergent injector to discharge nipple on machine. Connect high pressure hose to injector with quick coupler. (Check to make sure locking coupler sleeves are in proper position before applying water pressure).

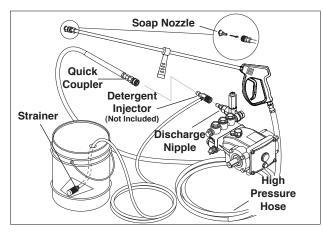





sure washers. Household detergents damage the pump. Prepare detergent solution as required by manufacturer. Fill a container with pressure washer detergent. Place filter end of detergent suction tube into detergent container.

**STEP 3:** With safety latch on spray

gun engaged, secure black detergent nozzle into quick



coupler. **NOTE:** Detergent cannot be applied using red, yellow, green or white nozzles.

**STEP 4:** With the engine running, pull trigger to operate machine. Liquid detergent is drawn into the machine

and mixed with water. Apply detergent to work area. Do not allow detergent to dry on surface.

*IMPORTANT: You must flush the detergent injection system after each use by placing the suction tube into a bucket of clean water, then run the pressure washer in low pressure for 1-2 minutes.* 

#### THERMAL PUMP PROTECTION

If you run the engine on your pressure washer for 1-2 minutes without pressing the trigger on the spray gun, circulating water in the pump can reach high temperatures. When the water reaches this temperature, the pump protector engages and cools the pump by discharging the warm water onto the ground. This thermal device prevents internal damage to the pump.

# **CLEANING TIPS**

Pre-rinse cleaning surface with fresh water. Place detergent suction tube directly into cleaning solution and apply to surface at low pressure (for best results, limit your work area to sections approximately 6 feet square and always apply detergent from bottom to top). Allow detergent to remain on surface 1-3 minutes. Do not allow detergent to dry on surface. If surface appears to be drying, simply wet down surface with fresh water. If needed, use brush to remove stubborn dirt. Rinse at high pressure from top to bottom in an even sweeping motion keeping the spray nozzle approximately 1 foot from cleaning surface. Use overlapping strokes as you clean and rinse any surface. For best surface cleaning action spray at a slight angle.

#### **Recommendations:**

- Before cleaning any surface, an inconspicuous area should be cleaned to test spray pattern and distance for maximum cleaning results.
- If painted surfaces are peeling or chipping, use extreme caution as pressure washer may remove the loose paint from the surface.
- Keep the spray nozzle a safe distance from the surface you plan to clean. High pressure wash a small area, then check the surface for damage. If no damage is found, continue to pressure washing.

#### A CAUTION - Never use:


- Bleach, chlorine products and other corrosive chemicals
- Liquids containing solvents (i.e., paint thinner, gasoline, oils)
- Tri-sodium phosphate products
- Ammonia products
- Acid-based products

These chemicals will harm the machine and will damage the surface being cleaned.




It will take a few seconds for the detergent to clear. Apply safety latch to spray gun. Remove black soap nozzle from the quick coupler. Select and install the desired high pressure nozzle. **NOTE:** You can also stop detergent from flowing by simply removing detergent siphon tube from bottle.


## SHUTTING DOWN AND CLEAN-UP

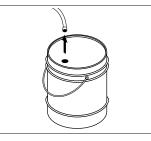

**STEP 1:** Remove detergent suction tube from container and insert into one gallon of fresh water. Slide nozzle forward for low pressure or to connect black detergent nozzle. Pull trigger on spray gun and siphon water for one minute.

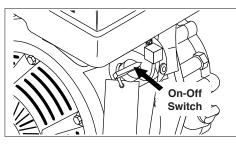


STEP 2: Turn off the engine.

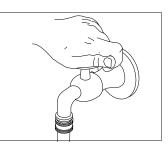


**STEP 3:** Turn off water supply.



 STEP 4: Press trigger to release water hos pressure. ma



**STEP 5:** Disconnect the garden hose from the water inlet on the machine.

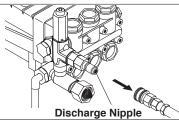

**STEP 6:** Disconnect the high pressure hose from discharge nipple.



**STEP 7:** Engage the spray gun safe-ty lock.

# STORAGE

CAUTION: Always store your pressure washer in a location where the temperature will not fall below 32°F (0°C). The pump in this machine is susceptible to permanent damage if frozen. FREEZE DAMAGE IS NOT COVERED BY WARRANTY.

- 1. Stop the pressure washer, squeeze spray gun trigger to release pressure.
- 2. Detach water supply hose and high pressure hose.
- 3. Turn on the machine for a few seconds, until remaining water exits. Turn engine off immediately.
- 4. Drain the gas and oil from the engine.
- 5. Do not allow high pressure hose to become kinked.
- 6. Store the machine and accessories in a room which does not reach freezing temperatures.

# CAUTION: Failure to follow the above directions will result in damage to your pressure washer.

When the pressure washer is not being operated or is being stored for more than one month, follow these instructions:

- 1. Replenish engine oil to upper level.
- 2. Drain gasoline from fuel tank, fuel line, fuel valve and carburetor.
- 3. Pour about one teaspoon of engine oil through the spark plug hole, pull the starter grip several times

and replace the plug. Then pull the starter grip slowly until you feel increased pressure which indicates the piston is on its compression stroke and leave it in that position. This closes both the intake and exhaust valves to prevent rusting of cylinder.

4. Cover pressure washer and store in a clean, dry place that is well ventilated away from open flame or sparks. NOTE: The use of a fuel additive, such as STA-BIL<sup>®</sup>, or an equivalent, will minimize the formulation of fuel deposits during shortage. Such additives may be added to the gasoline in the fuel tank of the engine, or to gasoline in a storage container.



After Extended Storage

CAUTION: Prior to restarting, thaw out any possible ice from pressure washer hoses, spray gun or wand.

#### **Engine Maintenance**

During the winter months, rare atmospheric conditions may develop which will cause an icing condition in the carburetor. If this develops, the engine may run rough, lose power and may stall. This temporary condition can be overcome by deflecting some of the hot air from the engine over the carburetor area. **NOTE:** Refer to the engine manufacturer's manual for service and maintenance of the engine.

| TROUBLESHOOTING                   |                                                   |                                                                                                                                                        |  |
|-----------------------------------|---------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| PROBLEM                           | POSSIBLE CAUSE                                    | SOLUTION                                                                                                                                               |  |
| LOW OPERATING<br>PRESSURE         | Faulty pressure gauge                             | Install new gauge.                                                                                                                                     |  |
| PRESSURE                          | Insufficient water supply                         | Use larger supply hose; clean filter at water inlet.                                                                                                   |  |
|                                   | Old, worn or incorrect spray nozzle               | Match nozzle number to machine and/or replace with new nozzle.                                                                                         |  |
|                                   | Belt slippage                                     | Tighten or replace; use correct belt.                                                                                                                  |  |
|                                   | Plumbing or hose leak                             | Check plumbing system for leaks. Re-tape leaks with teflon tape.                                                                                       |  |
|                                   | Faulty or mis-adjusted unloader valve             | Adjust unloader for proper pressure. Install repair kit when needed.                                                                                   |  |
|                                   | Worn packing in pump                              | Install new packing kit.                                                                                                                               |  |
|                                   | Fouled or dirty inlet or discharge valves in pump | Clean inlet and discharge valves.                                                                                                                      |  |
|                                   | Worn inlet or discharge valves                    | Replace with valve kit.                                                                                                                                |  |
|                                   | Obstruction in spray nozzle                       | Remove obstruction.                                                                                                                                    |  |
|                                   | Leaking pressure control valve                    | Rebuild or replace as needed.                                                                                                                          |  |
|                                   | Slow engine RPM                                   | Set engine speed at proper specifications.                                                                                                             |  |
|                                   | Pump sucking air                                  | Check water supply and possibility of air seepage.                                                                                                     |  |
|                                   | Valves sticking                                   | Check and clean or replace if necessary.                                                                                                               |  |
|                                   | Unloader valve seat faulty                        | Check and replace if necessary.                                                                                                                        |  |
| FLUCTUATING                       | Worn or dirty pump valves                         | Call local distributor.                                                                                                                                |  |
| PRESSURE                          | Nozzle is obstructed                              | Blow out or remove debris with fine needle.                                                                                                            |  |
|                                   | Pump sucking air, inlet hose<br>leaking           | Check that all hoses and fittings are airtight<br>Turn off machine and trigger spray gun unti<br>a steady flow of water emerges through the<br>nozzle. |  |
|                                   | Insufficient water supply                         | Turn water on full force. Check garden hose for kinks, leaks or blockage.                                                                              |  |
| PRESSURE LOW                      | Nozzle worn                                       | Replace nozzle.                                                                                                                                        |  |
| AFTER PERIOD OF<br>NORMAL USE     | Unloader valve worn                               | Replace unloader valve.                                                                                                                                |  |
| ENGINE WILL NOT                   | Low oil shutdown                                  | Fill engine with oil.                                                                                                                                  |  |
| START OR STOPS<br>WHILE OPERATING | Out of gas                                        | Fill fuel tank.                                                                                                                                        |  |
|                                   | Water in gasoline                                 | Drain gas tank; fill with clean fuel.                                                                                                                  |  |
| ENGINE IS                         | Nozzle partially blocked                          | Clean nozzle.                                                                                                                                          |  |
| OVERLOADED                        | Excessive pressure from high engine RPM           | Adjust engine throttle to lower RPM.                                                                                                                   |  |
|                                   |                                                   |                                                                                                                                                        |  |

|                                                                                                              | TROUBLESHO                                                | DTING                                                            |  |
|--------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|------------------------------------------------------------------|--|
| PROBLEM                                                                                                      | POSSIBLE CAUSE                                            | SOLUTION                                                         |  |
| VATER OR OIL A small amount of leaking is If excessive leaking occurs, or   LEAKING FROM normal distributor. |                                                           | If excessive leaking occurs, call local distributor.             |  |
| PRESENCE OF<br>WATER IN PUMP                                                                                 | Water sprayed at machine                                  | Change oil. Direct spray away from ma-<br>chine.                 |  |
| OIL                                                                                                          | High humidity in air                                      | Check and change oil twice as often.                             |  |
|                                                                                                              | Piston packing worn. Oil seal worn.                       | Call local distributor.                                          |  |
| ENGINE OPERATES                                                                                              | Not enough gas or engine oil                              | Fill tank with gas. Check oil level.                             |  |
| FOR 15 MINUTES<br>THEN STOPS                                                                                 | Vapor lock developed by heat of day                       | Keep gas tank full to avoid vapor locking.                       |  |
|                                                                                                              | Obstruction in fuel filter                                | Clean or replace fuel filter.                                    |  |
| ENGINE LACKS<br>POWER                                                                                        | Dirty air filter                                          | Replace air filter.                                              |  |
| ENGINE FALTERS                                                                                               | Choke is opened too soon                                  | Move choke to halfway position until engine runs smoothly.       |  |
| WATER DRIPPING                                                                                               | Piston packing worn                                       | Call local distributor.                                          |  |
| FROM UNDER<br>PUMP                                                                                           | O-Ring plunger retainer worn                              | Call local distributor.                                          |  |
|                                                                                                              | Cracked piston                                            | Call local distributor.                                          |  |
| OIL DRIPPING<br>FROM UNDER<br>PUMP                                                                           | Oil seal worn or damaged                                  | Call local distributor.                                          |  |
| WATER LEAKING<br>FROM PUMP                                                                                   | Spray gun closed with machine running 5 minutes or longer | Open spray gun or turn off machine.                              |  |
| PROTECTOR                                                                                                    | Excess water supply pressure                              | Place a pressure regulator at end of 50' garden hose.            |  |
| NO DETERGENT                                                                                                 | Detergent suction tube not properly connected to machine  | Check connection.                                                |  |
|                                                                                                              | Detergent is too thick                                    | Dilute detergent. For best results, use manufacturers detergent. |  |
|                                                                                                              | Detergent filter valve is at lowest setting               | Set detergent filter valve to a higher setting                   |  |
|                                                                                                              | Filter on detergent suction tube is clogged               | Run warm water through filter to remove debris.                  |  |
|                                                                                                              | Damaged or clogged detergent suc-<br>tion tube            | Remove obstruction or replace detergent suction tube.            |  |
|                                                                                                              | A high pressure nozzle is attached.                       | Replace with black detergent nozzle.                             |  |
|                                                                                                              | Discharge nozzle is obstructed                            | Blow out or remove debris with fine needle.                      |  |
| GARDEN HOSE                                                                                                  | Loose fittings                                            | Tighten fittings.                                                |  |
| CONNECTION<br>LEAKS                                                                                          | Missing/worn rubber washer                                | Insert new washer.                                               |  |
|                                                                                                              |                                                           |                                                                  |  |

#### -----\_ .... .

PRESSURE WASHER Troubleshooting Guide

| TROUBLESHOOTING                                   |                     |                                                                                                                                                                     |  |
|---------------------------------------------------|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| PROBLEM POSSIBLE CAUSE                            |                     | SOLUTION                                                                                                                                                            |  |
| SPRAY WAND Spray wand not properly attached LEAKS |                     | Slide the spray wand into the gun. Turn the wand collar clockwise onto the spray gun threads until tight.                                                           |  |
|                                                   | Broken o-ring       | Call local distributor and order an o-ring.                                                                                                                         |  |
| PUMP IS NOISY                                     | Pump is sucking air | Check that hoses and fittings are air tight.<br>Turn off machine and purge pump by<br>squeezing trigger gun until a steady flow of<br>water emerges through nozzle. |  |

# **PREVENTATIVE MAINTENANCE**


This pressure washer was produced with the best available materials and quality craftsmanship. However, you as the owner have certain responsibilities for the correct care of the equipment. Attention to regular preventative maintenance procedures will assist in preserving the performance of your equipment. Contact your dealer for maintenance. Regular preventative maintenance will add many hours to the life of your pressure washer. Perform maintenance more often under severe conditions. Check pump oil and engine oil level before first use of your new pressure washer.

| MAINTENANCE SCHEDULE               |                 |                                                                                 |  |
|------------------------------------|-----------------|---------------------------------------------------------------------------------|--|
|                                    | Inspect         | Daily                                                                           |  |
| Engine Oil<br>SAE 10W-30           | Change          | First month or 20 hours.<br>Every 100 hours or every 6 months after first month |  |
|                                    | Filter          | Every 50 hours                                                                  |  |
| Air Cleaner/Filter                 | Inspect         | Daily                                                                           |  |
|                                    | Clean           | Every 3 months or 50 hours                                                      |  |
| Engine Fuel Filter                 |                 | 500 hours or 6 months                                                           |  |
| Spark Plug                         | Inspect         | Every 6 months or 100 hours                                                     |  |
| Maintenance                        | Change          | Every year or 300 hours                                                         |  |
| Clean Fuel Tank(s)                 |                 | Annually                                                                        |  |
| Pump Oil                           | Inspect         | Oil level daily                                                                 |  |
| (Non foaming)<br>SAE 10W-40 Change |                 | After first 50 hours, then every 500 hours or annually (or 3 months)            |  |
| Replace High Pressure Nozzle       |                 | Every 6 months                                                                  |  |
| Replace Quick Connects             |                 | Annually                                                                        |  |
| Clean Water Screen/Filter          |                 | Weekly                                                                          |  |
| Replace HP Hose                    |                 | Annually (if there are any signs of wear)                                       |  |
| Belts*                             | Tighten         | Every 6 months                                                                  |  |
| Dello                              | Inspect/Replace | Every 6 months                                                                  |  |

\*Note: When servicing belts, don't exceed 14 lb-ft on pump mounting screws.Failure to do so will cause pump thread damage.

Read engine manual for any maintenance or service questions.

#### **HOSE & SPRAY GUN ASSEMBLY**

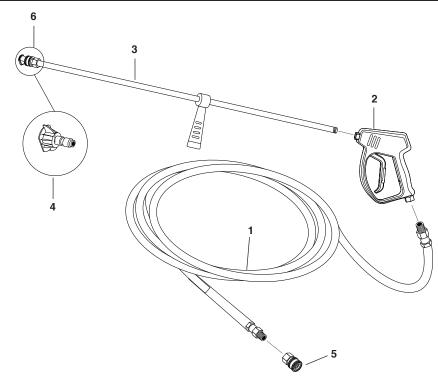

# HOSE & SPRAY GUN ASSEMBLY PARTS LIST

| ITEM | PART NO.    | DESCRIPTION                   | ΫΤ |
|------|-------------|-------------------------------|----|
| 1    | 8.916-740.0 | Hose, 3/8" x 50',             |    |
|      |             | 1 Wire Tuff-Skin (BGA Models) | 1  |
|      | 8.739-011.0 | Hose, 3/8" x 50',             |    |
|      |             | 1 Wire Tuff-Skin (BXA Models) | 1  |
|      | 8.739-021.0 | Hose, 3/8" x 50',             |    |
|      |             | 1 Wire Tuff-Skin (HD Models)  | 1  |
|      | 8.739-026.0 | Hose, 3/8" x 50',             |    |
|      |             | 1 Wire Tuff-Skin (PGA Models) | 1  |
| 2    | 8.750-247.0 | Gun, M407                     | 1  |
| 3    | 8.783-039.0 | Wand 30" Zinc Plated,         |    |
|      |             | Handle & Coupler              |    |
|      |             | (2700 PSI Models)             | 1  |
|      | 8.783-040.0 | Wand 44" Zinc Plated, Handle  |    |
|      |             | & Coupler (3500 PSI Models)   | 1  |

| ITEM | PART NO.    | DESCRIPTION                                                                      | QTY |
|------|-------------|----------------------------------------------------------------------------------|-----|
| 4    |             | Quick Connect<br>Nozzle Kit ( <b>3500 PSI Models</b>                             | ) 1 |
|      | 8.712-345.0 | ▲ Nozzle,<br>SAQCMEG 0004, RED                                                   |     |
|      | 8.712-346.0 | ▲ Nozzle,<br>SAQCMEG 1504, YELLOW                                                |     |
|      | 8.712-347.0 | ▲ Nozzle,<br>SAQCMEG 2504, GREEN                                                 |     |
|      | 8.712-348.0 | ▲ Nozzle,<br>SAQCMEG 4004, WHITE<br>Quick Connect<br>Nozzle Kit (2700 PSI Models | ) 1 |
|      | 8.712-331.0 | ▲ Nozzle,<br>SAQCMEG 0003, Red                                                   | ,   |
|      | 8.712-333.0 | ▲ Nozzle,<br>SAQCMEG 1503, Yellow                                                |     |
|      | 8.712-334.0 | ▲ Nozzle,<br>SAQCMEG 2503, Green                                                 |     |
|      | 8.712-335.0 | ▲ Nozzle,<br>SAQCMEG 4003, White                                                 |     |
| 5    | 9.802-166.0 | Coupler, 3/8" Female, Brass                                                      | 1   |
|      | 8.702-088.0 | ▲ O-Ring, Viton, 3/8"                                                            | 1   |
| 6    | 9.802-164.0 | Coupler, ¼" Female Brass                                                         | 1   |
|      | 8.702-084.0 | ▲ O-Ring, Viton, ¼"                                                              | 1   |
|      |             | ▲ Not Shown                                                                      |     |

# **OIL CHANGE RECORD**

Check pump oil and engine oil level before first use of your new pressure washer.

Check pump oil and engine oil level before first use of your new pressure washer.

Pump oil: Check level daily before first use of your new Power Washer. Change pump oil after first 50 hours every year or 500 hours thereafter. Use SAE 10W-40 non foaming.

Engine oil: Check daily before first use of your new Power Washer. Change engine oil after first 20 hours and every 100 hours thereafter. Use SAE 10W-30.

| Date Oil Changed<br>Month/Day/Year | Estimated Operating<br>Hours Since Last<br>Oil Change | Date Oil Changed<br>Month/Day/Year | Estimated Operating<br>Hours Since Last<br>Oil Change |
|------------------------------------|-------------------------------------------------------|------------------------------------|-------------------------------------------------------|
|                                    |                                                       |                                    |                                                       |
|                                    |                                                       |                                    |                                                       |
|                                    |                                                       |                                    |                                                       |
|                                    |                                                       |                                    |                                                       |
|                                    |                                                       |                                    |                                                       |



Form #8.919-400.0 • BGA • Revised 04/19 • Printed in U.S.A. or Mexico